
SPECTRO Series

SPECTRO-3-100-COF-...-CL

- Measuring range typ. 60 mm ... 240 mm
- Integrated transmitter and receiver optics (confocal)
- Up to 31 colors can be stored
- RS232 interface (USB or Ethernet adapter is available)
- Super-bright white-light LED (AC-/DC-/PULSEoperation or OFF for luminous objects can be switched)
- Color detection, contrast detection, and gray scale detection
- Insensitive to outside light (in AC- or PULSE-operation)
- Brightness correction can be activated (STAT/DYN)
- Scan frequency max. 35 kHz (in DC- or OFF-operation)
- Switching frequency typ. 40 kHz
- Several TEACH functions (via PC, PLC, or push button)
- Various evaluation algorithms can be activated
- "BEST HIT" mode ("human color assessment")
- Switching state display by means of 5 yellow LEDs
- Parameterizable via Windows® software, scope function
- Temperature compensated
- Averaging can be activated (from 1 up to over 32000 values)
- Color control of luminous objects (LEDs, halogen lamps, displays, ...)
- 3-color filter detector (true color detector: "human color perception")



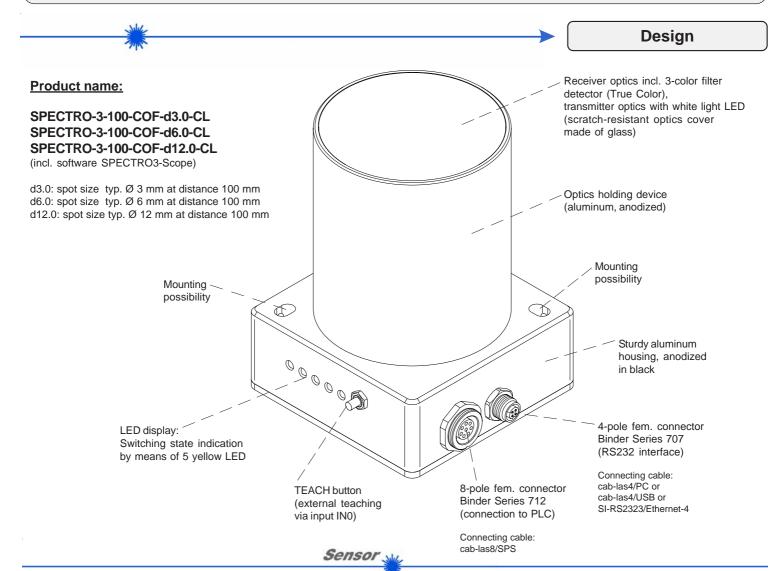

Instruments






Technical Data


Model	SPECTRO-3-100-COF-d3.0-CL	SPECTRO-3-100-COF-d6.0-CL	SPECTRO-3-100-COF-d12.0-CL
Voltage supply	+24VDC (± 10%), reverse polarity protected, overcurrent protected		
Current consumption	< 160 mA		
Max. switching current	100 mA, short circuit proof		
Switching state indication	5 yellow LED visualize the physical state of the outputs OUT0 OUT4		
Input digital (1x)	INO (Pin 3), digital (0V/+24V) or teach button at the housing		
Outputs digital (5x)	OUT0 OUT4 (Pin 4 8): digital (0V/+24V), npn-/pnp-able (bright-/dark-switching, can be switched)		
Interface	RS232		
Pulse lengthening	0 100 ms, adjustable via PC software		
Averaging	max. 32768 values, adjustable via PC software		
Scan frequency	LED operation, can be switched via PC software: AC operation: max. 20 kHz (depends on parameterization) DC and OFF operation: max. 35 kHz (depends on parameterization) PULSE operation: max. 5 kHz (depends on parameterization)		
Switching frequency	typ. 40 kHz		
Transmitter (light source)	super-bright white-light LED		
Transmitter control	can be switched via PC software: AC operation (LED MODE-AC), DC operation (LED MODE-DC), OFF operation (LED MODE-OFF)		
Measuring range	typ. 70 mm 180 mm	typ. 60 mm 240 mm	typ. 60 mm 240 mm
Receiver	3-color filter detector (TRUE COLOR detector, "human color perception"), color filter curves acc. to CIE 1931		
Receiver gain setting	8 steps (AMP1 AMP8), adjustable via PC software		
Ambient light	max. 5000 Lux		
Size of light spot	typ. Ø 2.5 mm at distance 70 mm typ. Ø 3.0 mm at distance 100 mm typ. Ø 3.5 mm at distance 130 mm typ. Ø 4.5 mm at distance 150 mm typ. Ø 5.5 mm at distance 170 mm	typ. Ø 3 mm at distance 60 mm typ. Ø 6 mm at distance 100 mm typ. Ø 9 mm at distance 140 mm typ. Ø 13 mm at distance 180 mm typ. Ø 17 mm at distance 220 mm	typ. Ø 6 mm at distance 60 mm typ. Ø 12 mm at distance 100 mm typ. Ø 19 mm at distance 140 mm typ. Ø 26 mmat distance 180 mm typ. Ø 32 mm at distance 220 mm
Reproducibility	in the X, Y color range each 1 digit at 12-bit A/D conversion		
Temperature drift X,Y	ΔΧ/ΔΤ; ΔΥ/ΔΤ typ. 0,2 digits/°C (< 0,01% / °C)		
Color difference	$\Delta E >= 0.5$		
Color space	X Y INT siM (Lab)		
Color memory capacity	non-volatile EEPROM with parameter sets for max. 31 colors		
Housing dimensions	LxWxH approx. 65 mm x 65 mm x 88 mm (incl. optics holding device Ø 55 mm, without flange connectors)		
Housing material	aluminum, anodized in black (optics holding device: aluminum, anodized)		
Enclosure rating	IP67 (optics), IP64 (electronics)		
Connecting cables	to PLC: cab-las8/SPS or cab-las8/SPS-w to PC/RS232 interface: cab-las4/PC or cab-las4/PC-w to PC/USB interface: cab-las4/USB or cab-las4/USB-w to PC/Ethernet interface: SI-RS232/Ethernet-4		
Type of connector	connection to PLC: 8-pole fem. connector (Binder 712), connection to PC: 4-pole fem. connector (Binder 707)		
Operating temp. range	-20°C +55°C		
Storage temp. range	-20°C +85°C		
EMC test acc. to	DIN EN 60947-5-2 (€		






Dimensions

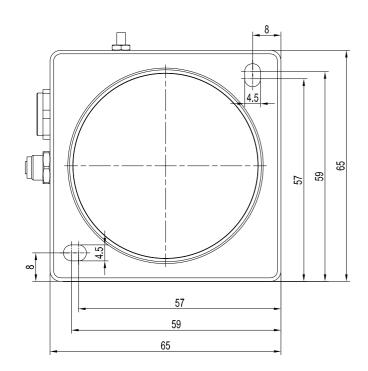

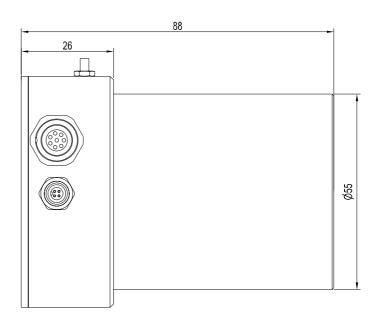

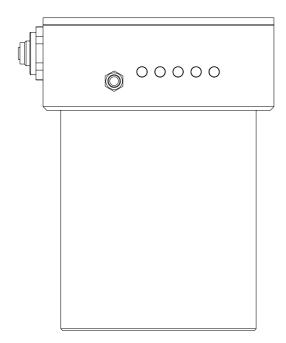

All dimensions in mm






Connector Assignment

Connection to PLC:

8-pole fem. connector Binder Series 712

Pin:	Color:	Assignment:
1	white	GND (0V)
2	brown	+24VDC (±10%)
3	green	INO
4	yellow	OUT0
5	grey	OUT1
6	pink	OUT2
7	blue	OUT3
8	red	OUT4

Connecting cable: cab-las8/SPS-(length) cab-las8/SPS-w-(length) (angle type, 90°) (standard length 2m)

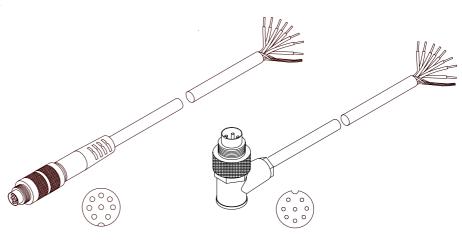

cab-las8/SPS-... (max. length 25m, outer jacket: PUR)

cab-las8/SPS-w-... (max. length 25m, outer jacket: PUR)

Connection to PC:

4-pole fem. connector Binder Series 707

Assignment:

+24VDC (+Ub, OUT)

GND (0V) 2 RxD 3

4 TxD

Connection via RS232 interface at the PC:

Connecting cable: cab-las4/PC-(length) cab-las4/PC-w-(length) (angle type 90°) (standard length 2m)

alternative:


Connection via USB interface at the PC:


Connecting cable (incl. driver software): cab-las4/USB-(length) cab-las4/USB-w-(length) (angle type 90°) (standard length 2m)

alternative:

Connection to local network via Ethernet bus:

Adapter (based on Lantronix XPortModul):

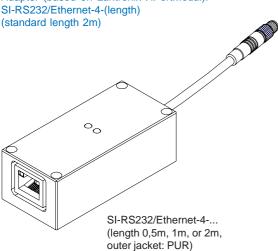

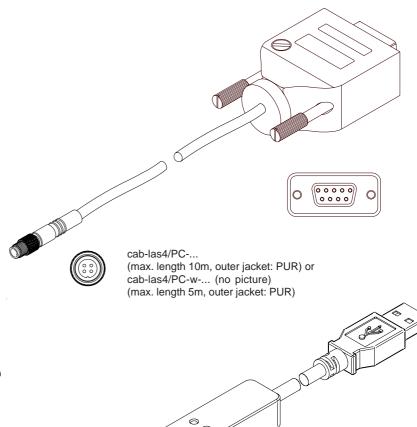







Measuring Principle

Measuring principle of the color sensors of SPECTRO-3 series:

The SPECTRO-3 provides highly flexible signal acquisition. For example, the sensor can be operated in alternating-light mode (AC mode), which makes the sensor insensitive to extraneous light. It also can be set to constant-light mode (DC mode), which makes the sensor extremely fast and allows a scan-frequency of up to 35 kHz. An OFF function turns off the integrated light source at the sensor and changes to DC operation. The sensor then can detect so-called "self-luminous objects". In PULSE operation extremely dark surfaces can be reliably detected. With the stepless adjustment of the integrated light source as well as the selectable gain of the receiver signal and an INTEGRAL function the sensor can be set to almost any surface or any "self-luminous object".

When the integrated light source of the SPECTRO-3 color sensor is activated, the sensor detects the radiation that is diffusely reflected from the object. As a light source the SPECTRO-3 color sensor uses a white-light LED with adjustable transmitter power. An integrated 3-fold receiver for the red, green, and blue content of the light that is reflected from the object, or the light that is emitted by a "self-luminous object", is used as a receiver.

The SPECTRO-3 color sensor can be "taught" up to 31 colors. For each of these taught colors it is possible to set tolerances. In "X Y INT - 2D" or "s i M - 2D" mode these tolerances form a color cylinder in space. In "X Y INT - 3D" or "s i M - 3D" mode the tolerances form a color sphere in space. Color evaluation according to "s i M - 2D" is based on the lab calculation method. All modes can be used in combination with several operating modes such as "FIRST HIT" and "BEST HIT". Raw data are represented with 12 bit resolution.

As a special feature the sensor can be taught two completely independent parameter sets. Input INO can then be used to tell the sensor which parameter set it should work with.

Color detection either operates continuously or is started through an external PLC trigger signal. The respective detected color either is provided as a binary code at the 5 digital outputs or can be sent directly to the outputs, if only up to 5 colors are to be detected. At the same time the detected color code is visualised by means of 5 LEDs at the housing of the SPECTRO-3. [Please note: Visualisation by means of LEDs not available with SPECTRO-3-...-JR types.]

With a TEACH button at the sensor housing the color sensor can be taught up to 31 colors. For this purpose the corresponding evaluation mode must be set with the software. The TEACH button is connected in parallel to the input IN0 (green wire at cable cab-las8/SPS). [Please note: TEACH button not available with SPECTRO-3-...-JR types.]

Parameters and measurement values can be exchanged between a PC and the SPECTRO-3 color sensor through the serial RS232 interface. All the parameters for color detection also can be saved to the non-volatile EEPROM of the SPECTRO-3 color sensor through this serial RS232 interface. When parameterisation is finished, the color sensor continues to operate with the current parameters in STAND-ALONE mode without a PC.

The sensors of the SPECTRO-3 series can be calibrated (white-light balancing). Balancing can be performed to any white surface. A ColorChecker[™] table with 24 color fields is available as an alternative. White-light balancing or calibration can be performed to one of the white fields.



Visualization

Visualization of the color code:

The color code is visualised by way of 5 yellow LEDs at the housing of the SPECTRO-3 color sensor. At the same time in the binary mode (OUT BINARY) the color code indicated on the LED display is output as 5-bit binary information at the digital outputs OUT0 to OUT4 of the 8-pin SPECTRO-3/PLC socket.

The SPECTRO-3 color sensor is able to process a maximum of 31 colors (color code 0 ... 30) in accordance with the corresponding rows in the COLOR TEACH TABLE. An "error" respectively a "not detected color" is displayed by the lighting of all LED (OUT0 ... OUT4 digital outputs are set to HIGH-level).

In the DIRECT mode (OUT DIRECT HI or OUT DIRECT LO) the maximum numbers of colors to be taught is 5 (color no. 0, 1, 2, 3, 4). If DIRECT HI is activated, the specially digital output is set to HI, while the other 4 are set to LO. If the current color does not correspond with any of the teach-in colors, all digital outputs are set to LOW (no LED is lighting).

If DIRECT LO is activated, the specially digital output is set to LO, while the other 4 are set to HI. If the current color does not correspond with any of the teach-in colors, all digital outputs are set to HIGH (all LED are lighting).







LED-Display

LED display:

The color code is visualized by means of 5 yellow LEDs at the housing of the color sensor. At the same time the color code indicated at the LED display is output as 5-bit binary information at the digital outputs OUT0 ... OUT4 of the 8-pole PLC connector.

In the DIRECT mode the maximum number of color codes to be taught is 5. These 5 color codes can be directly output at the 5 digital outputs. The respective detected color code is displayed by means of the 5 yellow LEDs at the color sensor housing.

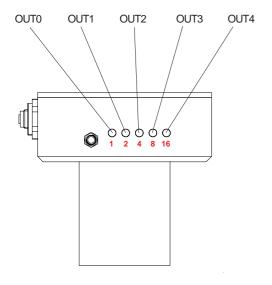

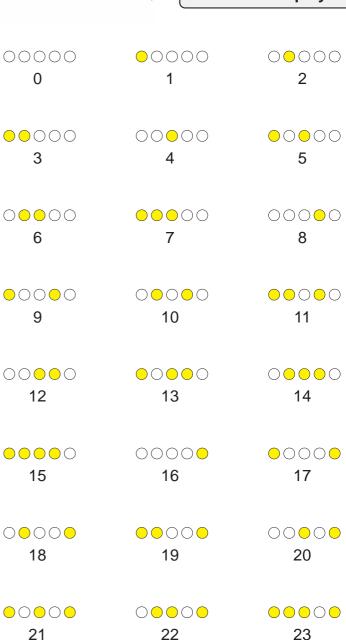


















Error or "not detected"



Parameterization

Windows® user interface:

The color sensor is parameterized under Windows® with the SPECTRO3-Scope software. The Windows® user interface facilitates the teach-in process at the color sensor and supports the operator in the task of adjustment and commissioning of the color sensor.

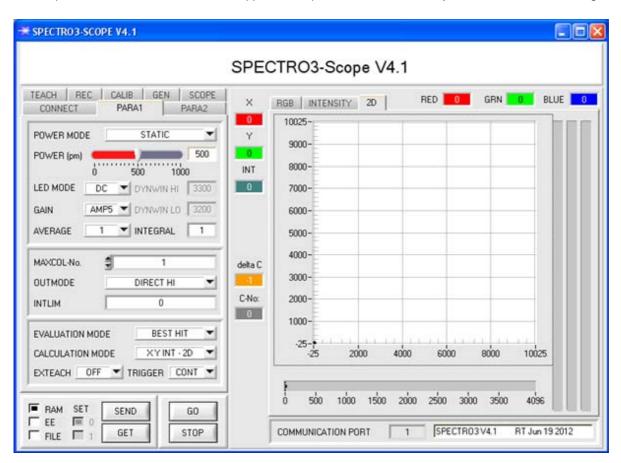

Under Windows® representation of the color value on a PC in numeric form and in a color chart, and representation of RGB values in a time chart. In addition the current RGB values are displayed as a bar chart.

The RS232 interface (tab PARA1 or PARA2) is used for setting parameters such as:

- POWER MODE: Light power of the LED

LED MODE: Triggering of the internal light source
 GAIN: Used for setting the gain of the receiver
 AVERAGE: Averaging over a maximum of 32768 values

- INTEGRAL: This function field is used to set the number of scan values (measurement values) over which the

raw signal measured at the receiver is summed up. This integral function allows the reliable

detection even of extremely weak signals

MAXCOL-No.: Number of colors to be checkedOUTMODE: Triggering of the digital outputs

- INTLIM: Minimum intensity required for color evaluation

- EVALUATION MODE: Various evaluation modes to choose from (FIRST HIT, BEST HIT, MIN DIST, COL5)

- CALCULATION MODE: There are 2 methods of teaching a color. The CALCULATION MODE X/Y/INT (or s/i/M) uses a color

sphere in space with radius TOL. Contrary to this, the CALCULATION MODE X/Y INT (or s/i M) uses a

color cylinder in space with radius CTO or siTO and with height ITO or M.

The teach process is the same for both methods. Color evaluation according to "s i M - 2D" uses the

Lab calculation method.

- EXTEACH: In all the evaluation modes teaching of a color can be performed externally through INO or by means

of the button at the sensor housing [Please note: TEACH button not available with SPECTRO-3-...-JR

types.]

- TRIGGER: Continuous or external or self trigger








Firmware Update

Firmware Update by means of the software "Program Loader" or "Firmware Loader":

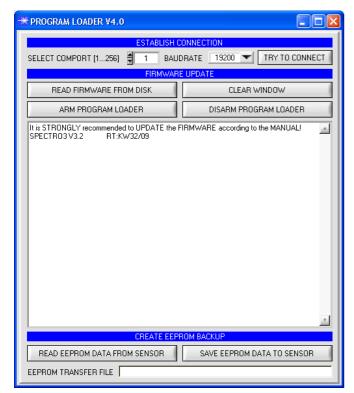

ESTABLISH CONNECTION

SELECT COMPORT [1...256] 1 BAUDRATE 19200 TRY TO CONNECT

FIRMWARE UPDATE

READ FIRMWARE FROM DISK

CLEAR WINDOW

ARM FIRMWARE LOADER

IT IS STRONGLY RECOMMENDED TO UPDATE THE FIRMWARE ACCORDING TO THE MANUAL! SPECTRO1 V1.0 RT:KW50/10

CREATE EEPROM BACKUP

READ EEPROM DATA FROM SENSOR

EEPROM TRANSFER FILE

The software "Program Loader" or "Firmware Loader" allows the user to perform an automatic firmware update. The update will be carried out through the RS232 interface.

An initialisation file (xxx.ini) and a firmware file (xxx.elf.S) are required for performing a firmware update. These files can be obtained from your supplier. In some cases an additional firmware file for the program memory (xxx.elf.p.S) is also needed, and this file will be automatically provided together with the other two files.

A plausibility check is performed after the initialisation file has been loaded with the Program Loader. If the initialisation file was changed or damaged, it will not be possible to perform a firmware update.

When the plausibility check is successfully completed, the instructions contained in the initialisation file will be carried out step by step.

The complete memory contents of the micro-controller in the sensor will be deleted in a firmware update. This means that both the program in the program memory and the data in the data memory will be lost.

The new firmware automatically writes the correct data to the program memory again.

However, the parameter settings, temperature curves, linearization curves, etc. that are stored in the data memory (EEPROM) will be deleted.

With the Program Loader V4.0 software the data will be saved in the EEPROM, and can be written back again after successful firmware update. For this purpose the software creates an EEPROM backup file.






Diagrams


<u>Diagrams</u>: SPOT DIAMETER and RELATIVE INTENSITY SPECTRO-3-100-COF-d3.0-CL

Spot diameter

SPECTRO-3-100-COF-d3.0-CL: 3 mm (typ.) at a working distance of 100 mm

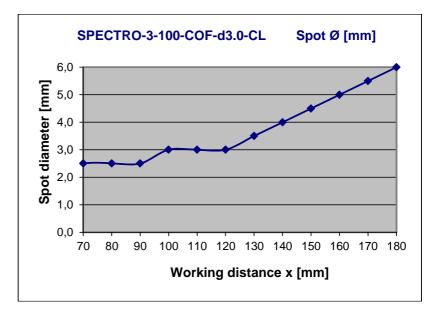

Relative intensity SPECTRO-3-100-COF-d3.0-CL: 100% at a working distance of 110 mm (INTENSITY 3644)

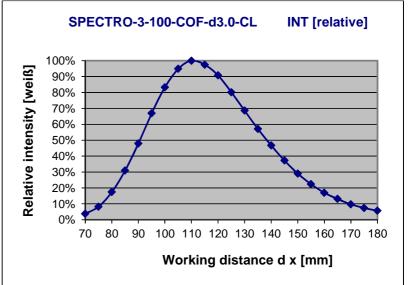







Diagrams

<u>Diagrams</u>: SPOT DIAMETER and RELATIVE INTENSITY SPECTRO-3-100-COF-d6.0-CL

Spot diameter SPECTRO-3-100-COF-d6.0-CL: 6 mm (typ.) at a working distance of 100 mm

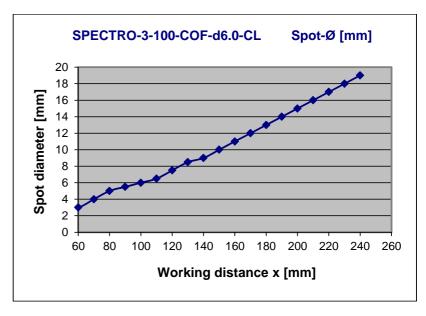

Relative intensity SPECTRO-3-100-COF-d6.0-CL: 100% at a working distance of 105 mm (INTENSITY 3701)

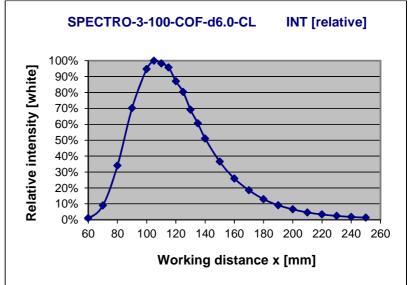




Diagrams

<u>Diagrams</u>: SPOT DIAMETER and RELATIVE INTENSITY SPECTRO-3-100-COF-d12.0-CL

Spot diameter SPECTRO-3-100-COF-d12.0-CL: 12 mm (typ.) at a working distance of 100 mm

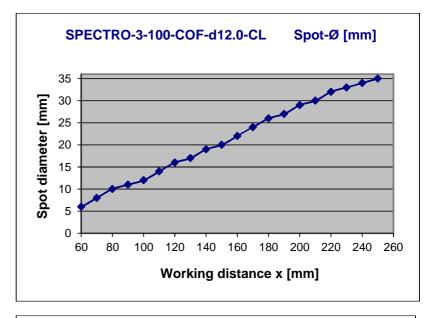

Relative intensity SPECTRO-3-100-COF-d12.0-CL: 100% at a working distance of 90 mm (INTENSITY 3634)

