

# **SPECTRO** Series

## SPECTRO-3-85-FCL-30°/30°

- Recommended measuring distance: typ. 50 mm ± 5 mm
- Big dynamic range due to focused white-light operation
- Up to 31 colors can be stored
- RS232 interface (USB or Ethernet adapter is available)
- 2 ring light optics with each 9 super-bright white-light LED, focused (AC-/DC-/PULSE-operation or OFF for luminous objects can be switched)
- Evaluation of forward scattered light and backward scattered light (alternating, can be switched from external via input IN0)
- Color detection, contrast detection, and gray scale detection
- Insensitive to outside light (in AC- or PULSE-operation)
- Brightness correction can be activated (STAT/DYN)
- Scan frequency max. 35 kHz (in DC- or OFF-operation)
- Several TEACH functions (via PC, PLC, or push button)
- Various evaluation algorithms can be activated
- "BEST HIT" mode ("human color assessment")
- Switching state display by means of 5 yellow LEDs
- Parameterizable via Windows® software, scope function
- Temperature compensated
- Color control of luminous objects (LEDs, halogen lamps, displays, ...)
- 3-color filter detector (true color detector: "human color perception")

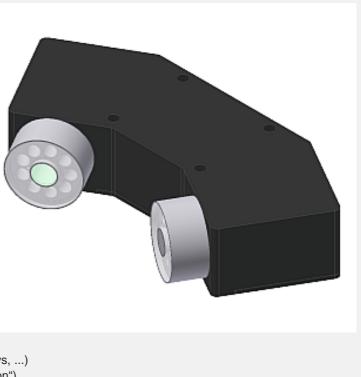

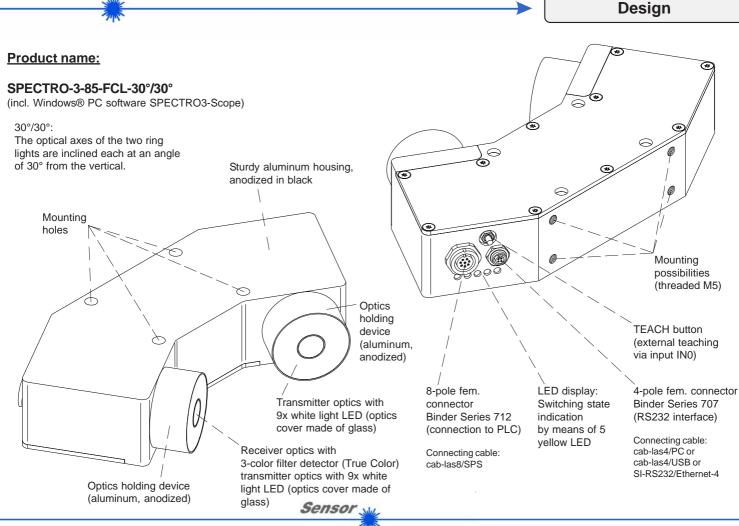

Sensor Instruments GmbH • D-94169 Thurmansbang • Schlinding 11 Tel. +49 (0)8544 9719-0 • Fax +49 (0)8544 9719-13 Instruments


**Technical Data** 


Model	SPECTRO-3-85-FCL-30°/30°
Voltage supply	+24VDC (± 10%), reverse polarity protected, overcurrent protected
Current consumption	< 220 mA
Max. switching current	100 mA, short circuit proof
Switching state indication	5 yellow LED visualize the physical state of the outputs OUT0 OUT4
Input digital (1x)	IN0 (Pin 3), digital (0V/+24V) or teach button at the housing
Outputs digital (5x)	OUT0 OUT4 (Pin 4 8): digital (0V/+24V), npn-/pnp-able (bright-/dark-switching, can be switched)
Interface	R\$232
Pulse lengthening	0 100 ms, adjustable via PC software
Averaging	max. 32768 values, adjustable via PC software
Scan frequency	LED operation, can be switched via PC software: AC operation: max. 20 kHz (depends on parameterization) DC and OFF operation: max. 35 kHz (depends on parameterization) PULSE operation: max. 5 kHz (depends on parameterization)
Switching frequency	typ. 60 kHz
Transmitter (light source)	2 ring light optics with each 9x super-bright white-light LED, focused
Transmitter control	can be switched via PC software: AC operation (LED MODE-AC), DC operation (LED MODE-DC), OFF operation (LED MODE-OFF)
Measuring range	typ. 20 mm 150 mm
Receiver	3-color filter detector (TRUE COLOR detector, "human color perception"), color filter curves acc. to CIE 1931
Receiver gain setting	8 steps (AMP1 AMP8), adjustable via PC software
Ambient light	max. 5000 Lux
Detection range (half intensity width)	typ. Ø 20 mm at a distance of 50 mm
Reproducibility	in the X, Y color range each 1 digit at 12-bit A/D conversion
Temperature drift X,Y	ΔX/ΔT; ΔΥ/ΔT typ. 0,2 digits/°C (< 0,01% / °C)
Color difference	$\Delta E >= 0,5$
Color space	X Y INT siM (Lab)
Color memory capacity	non-volatile EEPROM with parameter sets for max. 31 colors
Housing dimensions	LxWxH approx. 169.2 mm x 84.9 mm x 34 mm, without connectors
Housing material	aluminum, anodized in black (optics holding device: aluminum, anodized)
Enclosure rating	IP64
Connecting cables	to PLC: cab-las8/SPS or cab-las8/SPS-w to PC/RS232 interface: cab-las4/PC or cab-las4/PC-w to PC/USB interface: cab-las4/USB or cab-las4/USB-w to PC/Ethernet interface: SI-RS232/Ethernet-4
Type of connector	connection to PLC: 8-pole fem. connector (Binder 712), connection to PC: 4-pole fem. connector (Binder 707)
Operating temp. range	-20°C +55°C
Storage temperature range	-20°C +85°C
EMC test acc. to	DIN EN 60947-5-2 <b>C E</b>

Sensor N



**Dimensions** 

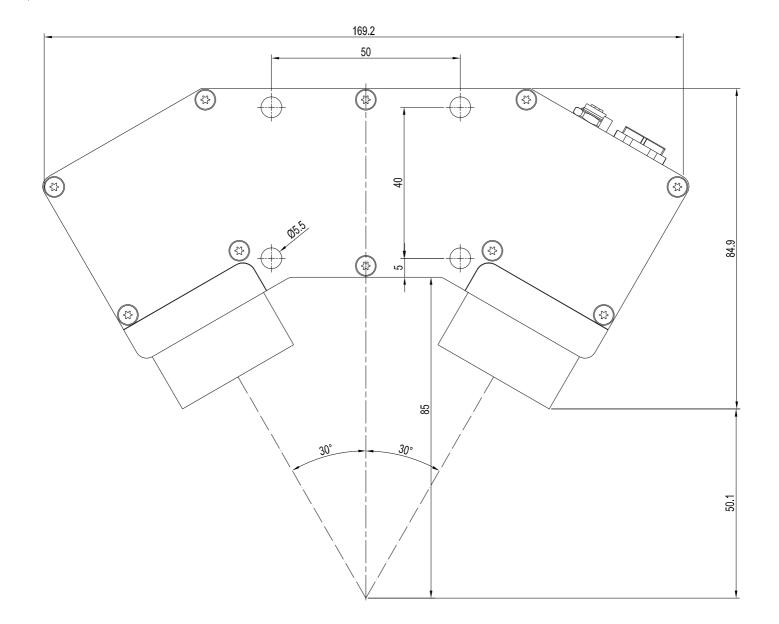

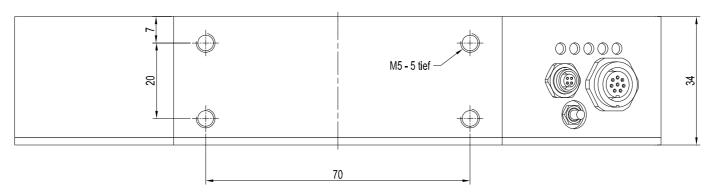

Alle dimensions in mm

Sensor




**Connector Assignment** 


#### Connection to PLC: 8-pole fem. connector Binder Series 712

Pin:	Color:	Assignment:
1	white	GND (0V)
2	brown	+24VDC (±10%)
3	green	IN0
4	yellow	OUT0
5	grey	OUT1
6	pink	OUT2
7	blue	OUT3
8	red	OUT4

Connecting cable: cab-las8/SPS-(length) cab-las8/SPS-w-(length) (angle type, 90°) (standard length 2m)

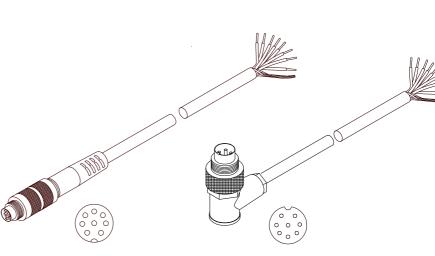

cab-las8/SPS-... (max. length 25m, outer jacket: PUR) cab-las8/SPS-w-... (max. length 25m, outer jacket: PUR)

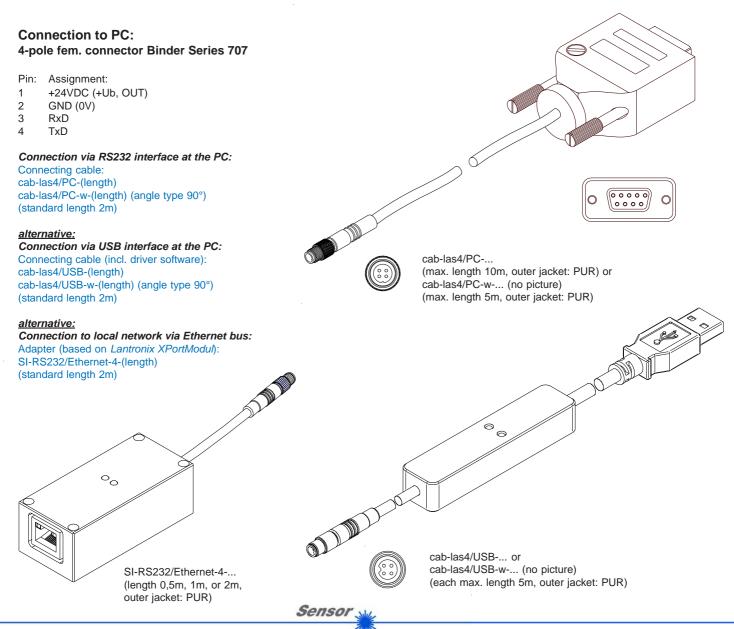

Sensor Instruments GmbH • D-94169 Thurmansbang • Schlinding 11 Tel. +49 (0)8544 9719-0 • Fax +49 (0)8544 9719-13 Instruments

info@sensorinstruments.de • www.sensorinstruments.de (2014-02-12) SPECTRO-3-85-FCL-30°/30°/Page 4 of 9 (0931.01) Subject to alteration

**Measuring Principle** 

#### Measuring principle of the color sensors of SPECTRO-3 series:

The SPECTRO-3 provides highly flexible signal acquisition. For example, the sensor can be operated in alternating-light mode (AC mode), which makes the sensor insensitive to extraneous light. It also can be set to constant-light mode (DC mode), which makes the sensor extremely fast and allows a scan-frequency of up to 35 kHz. An OFF function turns off the integrated light source at the sensor and changes to DC operation. The sensor then can detect so-called "self-luminous objects". In PULSE operation extremely dark surfaces can be reliably detected. With the stepless adjustment of the integrated light source as well as the selectable gain of the receiver signal and an INTEGRAL function the sensor can be set to almost any surface or any "self-luminous object".

When the integrated light source of the SPECTRO-3 color sensor is activated, the sensor detects the radiation that is diffusely reflected from the object. As a light source the SPECTRO-3 color sensor uses a white-light LED with adjustable transmitter power. An integrated 3-fold receiver for the red, green, and blue content of the light that is reflected from the object, or the light that is emitted by a "self-luminous object", is used as a receiver.

The SPECTRO-3 color sensor can be "taught" up to 31 colors. For each of these taught colors it is possible to set tolerances. In "X Y INT - 2D" or "s i M - 2D" mode these tolerances form a color cylinder in space. In "X Y INT - 3D" or "s i M - 3D" mode the tolerances form a color sphere in space. Color evaluation according to "s i M - 2D" is based on the lab calculation method. All modes can be used in combination with several operating modes such as "FIRST HIT" and "BEST HIT". Raw data are represented with 12 bit resolution.

As a special feature the sensor can be taught two completely independent parameter sets. Input IN0 can then be used to tell the sensor which parameter set it should work with.

Color detection either operates continuously or is started through an external PLC trigger signal. The respective detected color either is provided as a binary code at the 5 digital outputs or can be sent directly to the outputs, if only up to 5 colors are to be detected. At the same time the detected color code is visualised by means of 5 LEDs at the housing of the SPECTRO-3. [Please note: Visualisation by means of LEDs not available with SPECTRO-3-...-JR types.]

With a TEACH button at the sensor housing the color sensor can be taught up to 31 colors. For this purpose the corresponding evaluation mode must be set with the software. The TEACH button is connected in parallel to the input IN0 (green wire at cable cab-las8/SPS). [Please note: TEACH button not available with SPECTRO-3-...-JR types.]

Parameters and measurement values can be exchanged between a PC and the SPECTRO-3 color sensor through the serial RS232 interface. All the parameters for color detection also can be saved to the non-volatile EEPROM of the SPECTRO-3 color sensor through this serial RS232 interface. When parameterisation is finished, the color sensor continues to operate with the current parameters in STAND-ALONE mode without a PC.

The sensors of the SPECTRO-3 series can be calibrated (white-light balancing). Balancing can be performed to any white surface. A ColorChecker<sup>™</sup> table with 24 color fields is available as an alternative. White-light balancing or calibration can be performed to one of the white fields.



#### Visualization of the color code:

The color code is visualised by way of 5 yellow LEDs at the housing of the SPECTRO-3 color sensor. At the same time in the binary mode (OUT BINARY) the color code indicated on the LED display is output as 5-bit binary information at the digital outputs OUT0 to OUT4 of the 8-pin SPECTRO-3/PLC socket.

The SPECTRO-3 color sensor is able to process a maximum of 31 colors (color code 0 ... 30) in accordance with the corresponding rows in the COLOR TEACH TABLE. An "error" respectively a "not detected color" is displayed by the lighting of all LED (OUT0 ... OUT4 digital outputs are set to HIGH-level).

In the DIRECT mode (OUT DIRECT HI or OUT DIRECT LO) the maximum numbers of colors to be taught is 5 (color no. 0, 1, 2, 3, 4). If DIRECT HI is activated, the specially digital output is set to HI, while the other 4 are set to LO. If the current color does not correspond with any of the teach-in colors, all digital outputs are set to LOW (no LED is lighting).

If DIRECT LO is activated, the specially digital output is set to LO, while the other 4 are set to HI. If the current color does not correspond with any of the teach-in colors, all digital outputs are set to HIGH (all LED are lighting).


Sensor


#### SPECTRO-3 Serie • True Color Sensors

LED display:

The color code is visualized by means of 5 yellow LEDs at the housing of the color sensor. At the same time the color code indicated at the LED display is output as 5-bit binary information at the digital outputs OUT0 ... OUT4 of the 8-pole PLC connector.

In the DIRECT mode the maximum number of color codes to be taught is 5. These 5 color codes can be directly output at the 5 digital outputs. The respective detected color code is displayed by means of the 5 yellow LEDs at the color sensor housing.

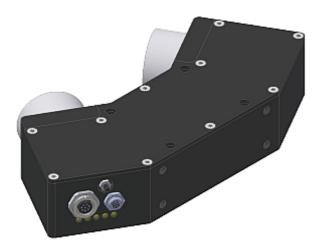

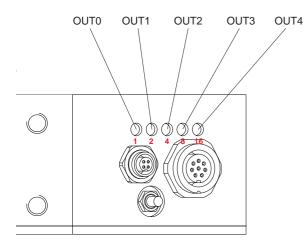

		LED Display
00000	0000	0000
0	1	2
●●○○○ 3	00 <b>0</b> 00 4	<u> </u>
3	4	5
$\bigcirc \bigcirc $	$\bigcirc \bigcirc $	00000
6	7	8
$\bigcirc \bigcirc $	$\bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc$	$\bigcirc \bigcirc $
9	10	11
C C		
00000	$\bigcirc \bigcirc $	$\bigcirc \bigcirc $
12	13	14
$\bigcirc \bigcirc $	00000	$\bigcirc \bigcirc $
15	16	17
0000	$\bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc$	$\bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc$
18	19	20
10		20
00000	$\bigcirc \bigcirc $	$\bigcirc \bigcirc $
21	22	23
$\bigcirc \bigcirc $	$\bigcirc \bigcirc $	$\bigcirc \bigcirc $
24	25	26
$\bigcirc \bigcirc $	$\bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc$	$\bigcirc \bigcirc $
27	28	29
21	20	20
$\bigcirc \bigcirc $	$\bigcirc \bigcirc $	
30	Error or "not detected"	


Instruments

Sensor



### Windows® user interface:

The color sensor is parameterized under Windows® with the SPECTRO3-Scope software. The Windows® user interface facilitates the teach-in process at the color sensor and supports the operator in the task of adjustment and commissioning of the color sensor.

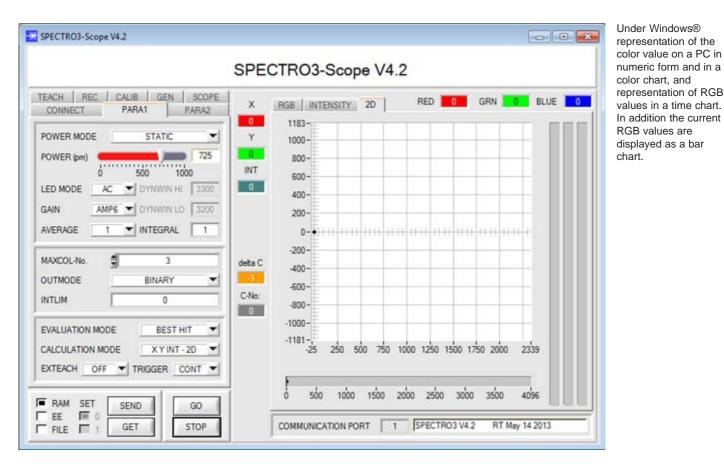

The RS232 interface (tab PARA1 or PARA2) is used for setting parameters such as:

<ul> <li>POWER MODE:</li> <li>LED MODE:</li> <li>GAIN:</li> <li>AVERAGE:</li> <li>INTEGRAL:</li> </ul>	Light power of the LED Triggering of the internal light source Used for setting the gain of the receiver Averaging over a maximum of 32768 values This function field is used to set the number of scan values (measurement values) over which the raw signal measured at the receiver is summed up. This integral function allows the reliable detection even of extremely weak signals
- MAXCOL-No.:	Number of colors to be checked
- OUTMODE:	Triggering of the digital outputs
- INTLIM:	Minimum intensity required for color evaluation
- EVALUATION MODE:	Various evaluation modes to choose from (FIRST HIT, BEST HIT, MIN DIST, COL5, THD RGB)
- CALCULATION MODE:	There are 2 methods of teaching a color, which are selectable via CALCULATION MODE. The CALCULATION MODE "X Y INT - 3D" (or "s i M - 3D") uses a color sphere in space with radius TOL. Contrary to this, the CALCULATION MODE "X Y INT - 2D" (or "s i M - 2D") uses a color cylinder in space with radius CTO or siTO and with height ITO or M. The teach process is the same for both methods. Color evaluation according to "s i M - 2D" uses the Lab calculation method
- EXTEACH:	In all the evaluation modes teaching of a color can be performed externally through IN0 or by means of the button at the sensor housing [Please note: TEACH button not available with SPECTRO-3JR types.]
- TRIGGER:	Continuous or external or self trigger

Sensor





### Firmware update by means of software "ProgramLoader" or "FirmwareLoader":

💥 PROGRAM LOADER V4.1	_ <u>_</u> ×			
ESTABLISH CONNECTION				
SELECT COMPORT [1256]	RATE 19200 TRY TO CONNECT			
FIRMWARE	UPDATE			
READ FIRMWARE FROM DISK	CLEAR WINDOW			
ARM PROGRAM LOADER	DISARM PROGRAM LOADER			
It is STRONGLY recommended to UPDATE the F SPECTRO3 V3.2 RT:KW09/10	IRMWARE according to the MANUAL!			
FILE LOADED: d`\Work_Released_S_Record_Files\Work_Released_Firmware_Initial_Files\Spectro3\Firmwa re_Files_Spectro3V3x_To_Spectro3V33\Firmware_Update_IniFile_Spectro3V3x_To_Spectro 3V33.ini				
Initial file for fimmware update from old version: Spectro3 V3.x to new version: Spectro3 V3.3				
FILE READ OK! PRESS ARM FIRMWARE LOADER TO START FIRMWARE UPDATE.				
	×			
CREATE EEPROM BACKUP				
READ EEPROM DATA FROM SENSOR	SAVE EEPROM DATA TO SENSOR			
EEPROM TRANSFER d:\Mist\EEPROM_Backup.dat				

KIRMWARE LOADER V1.1	>				
ESTABLISH CONNECTION					
SELECT COMPORT [1256]	115200 TRY TO CONNECT				
FIRMWARE UPD	DATE				
READ FIRMWARE FROM DISK	CLEAR WINDOW				
ARM FIRMWARE LOADER	DISARM FIRMWARE LOADER				
IT IS STRONGLY RECOMMENDED TO UPDATE THE FIR	MWARE ACCORDING TO THE MANUAL!				
SPECTRO3 V4.0 RT May 09 2012	SPECTRO3 V4.0 RT May 09 2012				
FILE LOADED: d:Work_Released_S_Record_Files\Work_Released_Firmware_Initial_Files\Spectro3\Firmware_Files_S pectro3V4x_To_Spectro3V41\Firmware_Update_IniFile_Spectro3V4x_To_Spectro3V41.ini					
Initial file for firmware update from version: Spectro3 V4.x to version: Spectro3 V4.1					
FILE READ OK! PRESS ARM FIRMWARE LOADER TO START FIRMWARE UPDATE.					
	-				
CREATE EEPROM					
READ EEPROM DATA FROM SENSOR	SAVE EEPROM DATA TO SENSOR				
EEPROM TRANSFER FILE d:BackupFiles\EEPROM_Backup 1131.dat					

The software "ProgramLoader" or "FirmwareLoader" allows the user to perform an automatic firmware update. The update will be carried out through the RS232 interface.

An initialisation file (xxx.ini) and a firmware file (xxx.elf.S) are required for performing a firmware update. These files can be obtained from your supplier. In some cases an additional firmware file for the program memory (xxx.elf.p.S) is also needed, and this file will be automatically provided together with the other two files.





#### Using forward and backward scattering of object surfaces in PARA mode:

Some object surfaces are very hard to differentiate if only backward scattering is used.

If, however, forward scattering is used in addition, surfaces that have very similar colours but slightly different structures can be differentiated quite well.

Light is directed onto the surface at an angle of -30° and +30° from the normal (vertical). Only one light source is active at a time, which allows independent evaluation of forward and backward scattering. A specific parameter set is saved both for backward and forward scattering.

When the PARA mode (TRIGGER=PARA) is selected, the respective control of the external trigger input IN0 (with IN0 = HIGH: Backward scattering, and with IN0 = LOW: Forward scattering) makes it possible to use the two light sources alternately and to achieve a quasi-simultaneous use of backward and forward scattering.

